



DC User Guide - undercounter warewashers

Start up


1 Make sure **Water Supply** and **Mains Electrics** are switched on.

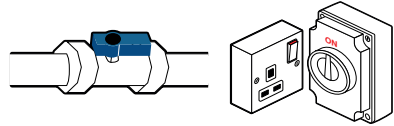

2 Firmly push **Drain Plug** in and ensure all **Filters** are in position.

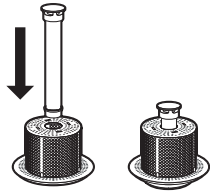

3 Check **Chemical Tubes** and replace container if chemicals are low.

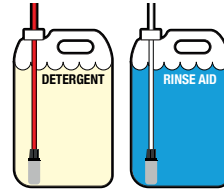

4 Close **Door** and press the **Power Button**. The green **Power Light** turns on.




5 When machine fills and reaches wash temperature, the **Ready Light** turns on.




Operation

1 Remove any debris from glasses and crockery and pre-rinse if necessary.

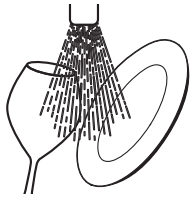

2 Load glasses or crockery into basket, then push **Basket** into machine.

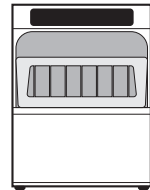


3 Close door, press the **Cycle Start** button. The **Wash Cycle** light turns on.



4 At end of cycle the **Wash Cycle** light turns off.



5 Open **Door** and remove **Basket**.

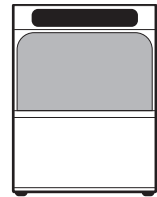


Shut down


1 Switch **Power Button** off.




2 Leaving **Filters** in place, remove **Drain Plug** and allow **wash tank** to empty.

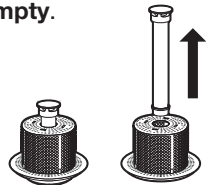


3 Remove **Filters**, clean thoroughly and return to machine.

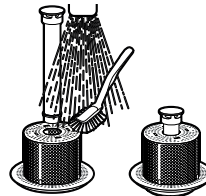

4 Check **Wash Tank** and **Rinse Arms** for debris and clean.

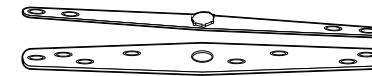

5 Switch off **Water Supply** and **Mains Electrics**.

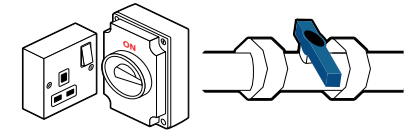

Integral water softener models only (IS)


1 The **Low Salt** light turns on when salt is low or empty.




2 To top up salt, ensure machine is empty of water. Open **Door**, unscrew **Salt Container Lid** and fill with granular catering salt only.



3 Screw **Lid** back on **Salt Container** and close **Door**. **Low Salt** light will turn off after a few minutes.

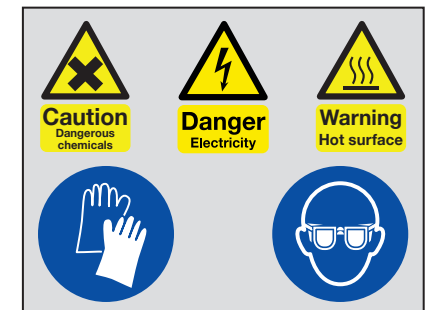

PLEASE NOTE: On start up, the machine may need to automatically regenerate the softener. The Regeneration  light will switch on and the wash cycle will not be able to start until the regeneration is complete (approx 16 minutes). **Do not** switch off the machine.